

## **FOAM FIRE EXTINGUISHER CHARGE**

### **2 GALLON FOAM CHARGE**

#### **‘B’ OUTER ALKALI CHAMBER**

1. Before charging, unscrew top cap and remove inner chamber. **THOROUGHLY** wash out inner and outer chambers. If hose is fitted, it should be washed and dried. Fittings should be cleaned out and lightly greased. Check if washer is good and passage to outlet is clear.
2. Empty the powder contained in this bag into a clean, ungalvanised bucket, pour fresh Lukewarm water onto the powder and stir until all is **COMPLETELY** dissolved.
3. Empty the solution into the extinguisher (having previously taken out the inner chamber). Add more water as required to bring the contents up to the solution level.
4. Prepare solution ‘A’

#### **‘A’ INNER ACID CHAMBER**

**BEFORE PROCEEDING, OUTER CHAMBER SHOULD BE FILLED WITH CHARGE ‘B’**

1. Empty the powder contained in this bag into a clean ungalvanised bucket. Pour **HOT** fresh water onto the powder slowly. Stir until all is **COMPLETELY** dissolved.
2. Carefully empty the solution into the inner chamber. Replace lead weight (where supplied) and lower chamber into machine.
3. Replace top cap and screw down tightly. Extinguisher is now ready for use.

**PLEASE NOTE:** Inner charge is irritating to eyes, respiratory system and skin

In case of contact with eyes, rinse immediately with plenty of water and seek medical advice. After contact with skin take off all contaminated clothing and wash immediately with plenty of water. Wear suitable gloves and eye/face protection.

On contact with water, the powder releases sulphuric acid which causes irritation to skin, eyes and respiratory system and can cause corrosion.